



## Specifications

Model No.	Power	Voltage	Wave length	Lamp type	Lamp base	Hold time	Lamp size	Operating Temp (°C/°F)	Life span	Weight (lbs=kgx2.2)	Color
U10-60W-01	60W±15%	100-120V 50~60Hz	254nm	UVC	E26 E27 E39 Ex39 E40	30/60/90/120 mins	E26: D94XL322mm E27: D94XL324mm E39: D94XL331mm E40: D94XL335mm	-10~35°C 14~95°F	9,000H	E26 NW:0.92kg GW:1.14kg	Matt Silver
U10-60W-02	60W±15%	220-240V 50~60Hz	254nm	UVC	E26 E27 E39 Ex39 E40	30/60/90/120 mins	E26: D94XL322mm E27: D94XL324mm E39: D94XL331mm E40: D94XL335mm	-10~35°C 14~95°F	9,000H	E39 NW:0.95kg GW:1.17kg	Matt Silver
U10-80W-01	80W±15%	100-120V 50~60Hz	254nm	UVC	E26 E27 E39 Ex39 E40	30/60/90/120 mins	E26: D94XL422mm E27: D94XL424mm E39: D94XL431mm E40: D94XL435mm	-10~35°C 14~95°F	9,000H	E26 NW:1.10kg GW:1.35kg	Matt Silver
U10-80W-02	80W±15%	220-240V 50~60Hz	254nm	UVC	E26 E27 E39 Ex39 E40	30/60/90/120 mins	E26: D94XL422mm E27: D94XL424mm E39: D94XL431mm E40: D94XL435mm	-10~35°C 14~95°F	9,000H	E39 NW:1.12kg GW:1.37kg	Matt Silver

## Features

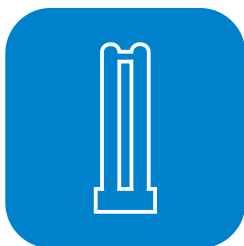

Quartz tube

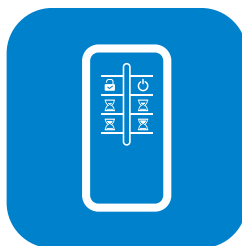

Wireless control



20S delay start-up



Ozone-free UV



Microwave and PIR Sensor Built-in




Effectively kill 99.99% mites



Effectively kill parasites



Effectively kill virus

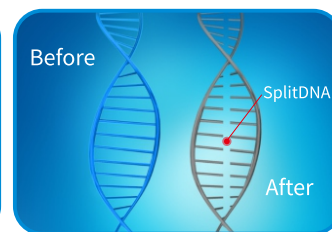

UV irradiation


### Ozone-free UV lamp

Ultraviolet radiation rays is in a straight line, it is not disinfecting if it is blocked;


Usable area Power	Hold time	30mins	60mins	90mins	120mins
60W		20 m <sup>2</sup>	30 m <sup>2</sup>	35 m <sup>2</sup>	40 m <sup>2</sup>
80W		40 m <sup>2</sup>	50 m <sup>2</sup>	55 m <sup>2</sup>	60 m <sup>2</sup>

### Microwave Sensor Built-in


Ceiling Mount  
Top View

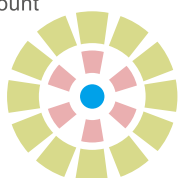


Top View

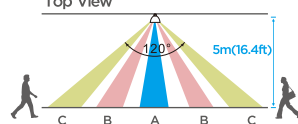

Wall Mount  
Top View

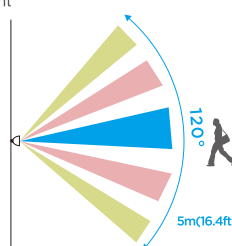


Top View

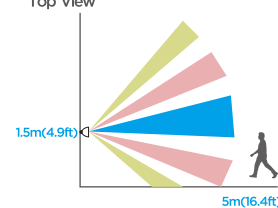

## Features

- **U10 Microwave and PIR Sensor Built-in**

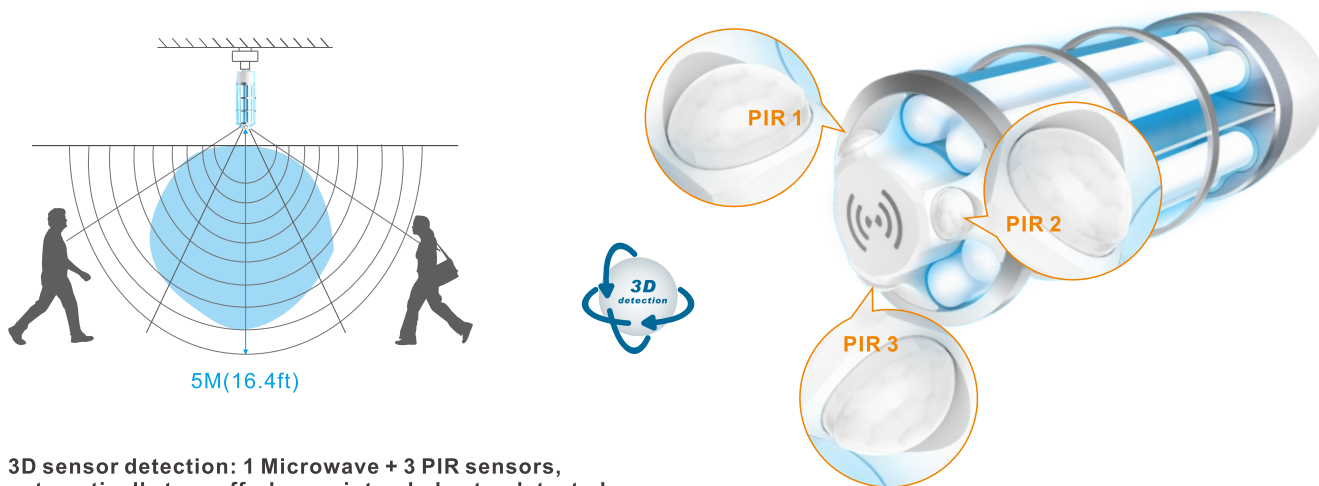

3D sensor detection: 1 Microwave + 3 PIR sensors, automatically turn off when unintended entry detected;

- **U10 Wireless Remote**




On/off and timing (30/60/90/120 mins) function with wireless remote  
(there is 20s buzzer sound before the light turns on)

- **U10 Base Options**




- **U10 Installation method**

Optional accessories:  
eyebolt base and tripod (M8 adapter)

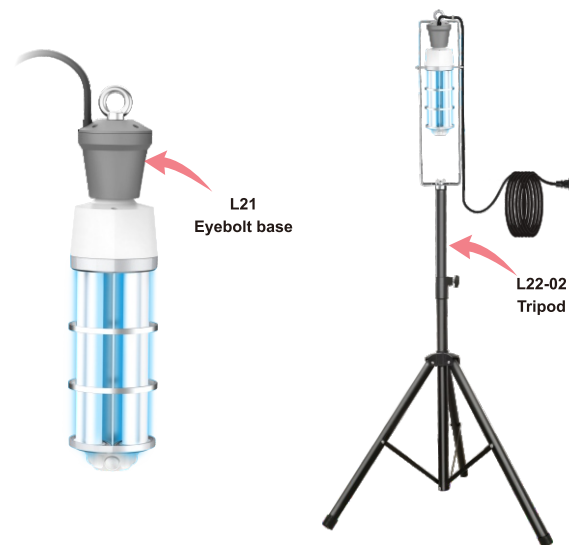


## Dimensions

**U10-60W**

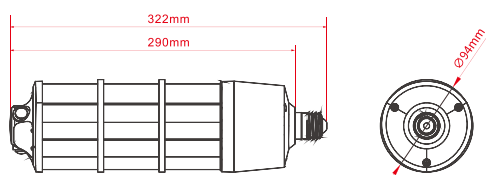

E26 D94XL322mm

**U10-80W**

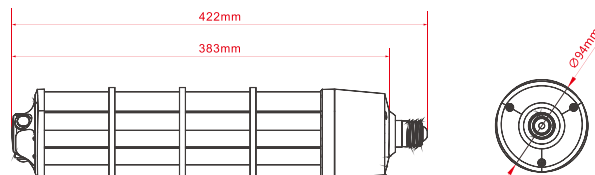

E26 D94XL422mm

## Application

School

A large, modern school building with a red and white facade. The building features a prominent glass-enclosed entrance area on the right side. The architecture is contemporary, with large windows and a clean, geometric design. The building is surrounded by a green lawn and some young trees. In the background, another red building is visible. The sky is clear and blue.

## Medical treatment




A photograph of a modern operating room. In the center is a surgical table covered with a blue drape. Above the table are two large, adjustable overhead surgical lights. To the left of the table is a blue medical cart with various equipment. To the right is a white medical cart with a monitor displaying a blue screen. The room has white walls and a light-colored tiled floor.

A modern office interior with a prominent, stepped wooden ceiling structure. The space features open-plan desks with green partitions, orange armchairs, and various lighting fixtures including pendant and track lights. The walls are a mix of wood and white brick.

## Packing

Model No.	Inner box size (mm) (x0.0393=inch)	N.W per lamp (kg) (lbs=kgx2.2)	G.W per lamp (kg) (lbs=kgx2.2)	G.W per Carton (kg) (lbs=kgx2.2)	Carton size (mm) (x0.0393=inch)	Quantity per carton
U10-60W-01	380x124x124mm	E26 0.92Kg	E26 1.14Kg	E26 14.68Kg	511x387x400mm	12PCS
U10-60W-02		E39 0.95Kg	E39 1.17Kg	E39 14.91Kg		
U10-80W-01	480x124x124mm	E26 1.10Kg	E26 1.35Kg	E26 17.28Kg	511x387x500mm	12PCS
U10-80W-02		E39 1.12Kg	E39 1.37Kg	E39 17.58Kg		
L21 (Eyebolt base;E39 Only)	130x130x92mm	0.38Kg	0.496Kg	6.72Kg	535x400x112mm	12PCS
L22-02 (Tripod)	890x136x136mm	2.42Kg	2.795Kg	18.13Kg	905x424x290mm	6PCS

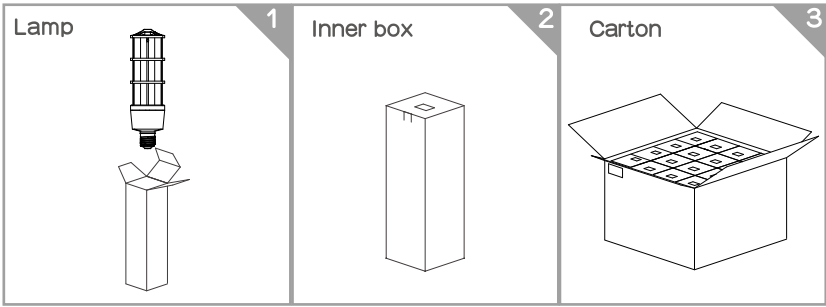

## CAUTIONS

- Risk of electric shock. Do not use where directly exposed to water.
- Avoid UV light direct eyes and skin when turn on the lamp.
- Don't take apart the lamps without our permit.

# GPS Health Defense Inc.

No.37, Canel Road, Colombo 01. 00100  
Email: [outreachsl@icloud.com](mailto:outreachsl@icloud.com)  
Tel: +94717725888 +94781361217